


Q- Send a ping from PC1 to PC2 in your simulated network, then immediately run 'show mac address-table' on the switch and note how the MAC addresses of both PCs appear in the table.

Hint: Try pinging in both directions to see how the table updates.

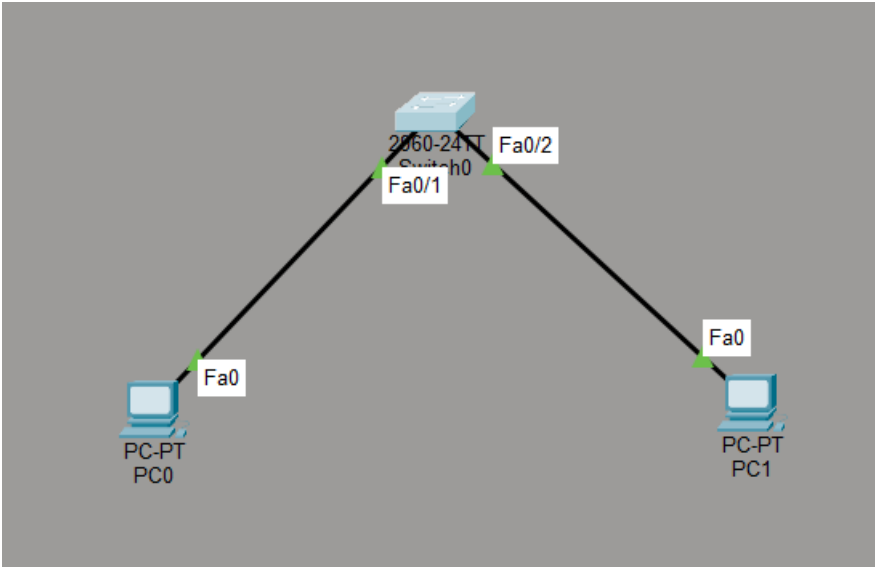

```
Switch>en
Switch#enable
Switch#show mac address-table
      Mac Address Table
-----
Vlan    Mac Address      Type        Ports
----    -
1       0001.631a.130e   DYNAMIC     Fa0/1
1       00d0.97ad.a23a   DYNAMIC     Fa0/2
Switch#
```

The experiment was successfully performed. The switch initially had no learned dynamic MAC entries for the two PCs. After sending ping traffic, the switch automatically learned the source MAC addresses and stored them in its MAC address table along with the corresponding switch ports.